



Induction Cooker User's Manual



Model: MC-RTS2055-E3A

Thank you for purchasing this Midea induction cooker. Please thoroughly read through this instruction manual before use and store it carefully for future use.

The pictures are only for reference, please keep the real product as a standard.

I.SAFETY INSTRUCTIONS

For safety reasons and to avoid damage to the appliance or injuries to people, please abide by all the safety instructions below.

Ignoring safety warnings may result in injuries.

This appliance does not take into consideration the following situations:

- use by children or disabled people without supervision;
- children treating it as a toy.

Symbols: ⊘ **Forbidden** ! **Mandatory** ⚠ **Warning** ⚠ **Attention**

 
- ⊘ Never heat foods in sealed containers, such as compressed products, cans, or coffee pots, to avoid explosion caused by heat expansion.




- ⊘ Do not directly rinse this induction cooker under water. Do not spill water or soup into the internal parts of the induction cooker.



- ⊘ To avoid affecting product performance and to prevent injury, do not heat empty pots. When in use, do not leave the appliance without supervision for a long time. When leaving the appliance without supervision, make sure there is enough water in the pot.

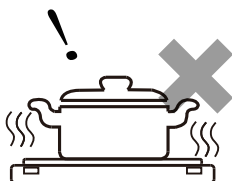


 - ⊘ To avoid accidents, do not place the induction cooker, when in use, on a gas stove (the magnetic lines can heat the metal parts of the gas stove).

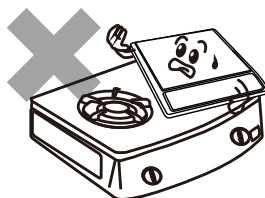


I.SAFETY INSTRUCTIONS

 
- ⚠ Do not heat iron items on the induction cooker heating plate to avoid danger caused by high temperatures.

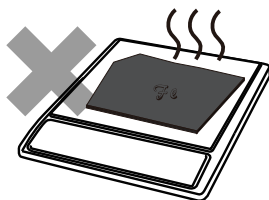

 
- ⚠ The utensils provided for the induction cooker can only be used for cooking with it. These cooking utensils cannot be used on both induction cooker and gas stove.

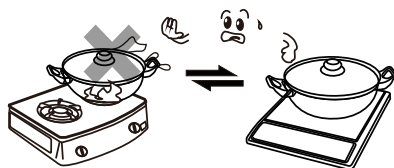

 
- ⚠ To avoid injuries such as scalding, do not let children operate the appliance alone.

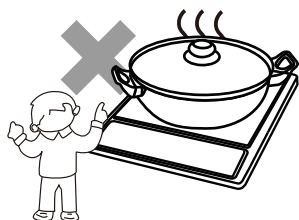

 
- ⚠ Unplug the power cord from the outlet after use to avoid fire and/or damaging the electronic components, caused by prolonged electrical connection.

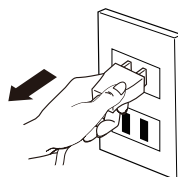

 - ⚠ To avoid danger, do not insert any foreign object, such as iron wire, nor block the air ventilation opening or air entry port.

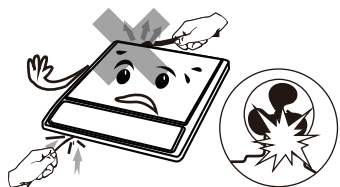


 - ⚠ People with heart pacemakers should consult a doctor. Only use the appliance after confirming that it does not affect the pacemaker.

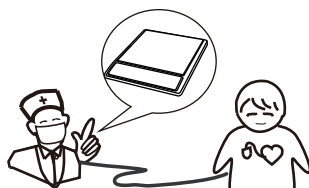


I.SAFETY INSTRUCTIONS

 
- ❗ To avoid damage, avoid causing impacts on the heating plate. **WARNING:** If the surface is cracked, switch off the appliance to avoid the possibility of electric shock.

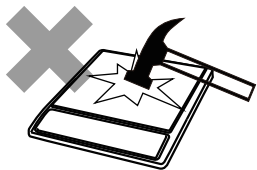

 
- ⚠ To avoid danger, do not place paper, aluminium foil, cloth or other unsuitable articles onto the induction cooker heating plate for indirect heating.

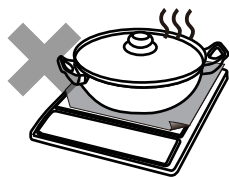

 - ⚠ When using the induction cooker, do not put it on any metal platform (such as iron, stainless steel, aluminium), or place a non-metal pad less than 10cm thick on the heating plate.

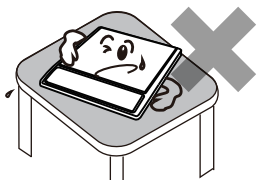

 
- ❗ When using the induction cooker, place it horizontally and allow at least 10cm of free space between the sides and back of the induction cooker and the wall. Do not use the induction cooker in narrow spaces. To avoid hindering release of heat, do not cover the ventilation opening.

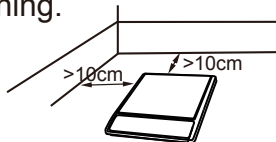

- ⚠ Please use a dedicated and high quality power outlet, with high power rating, equal to or above 10A. Do not use poor quality outlets. Do not share the power outlet with electrical appliances with high power ratings, such as air conditioners, electrical stoves etc to avoid fires caused by overburdening the outlet.




 - ❗ If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

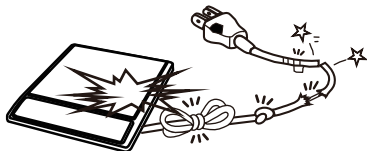

I.SAFETY INSTRUCTIONS

 
- ⚠ Do not touch the cooker plate with sharp tools to avoid cracking or damaging the plate. If cracking is found on the cooker plate, turn off the appliance to avoid any electrical shock that might occur.

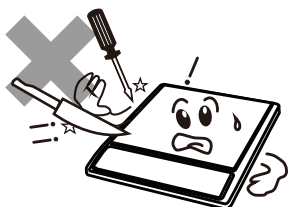


- ⚠ When using the induction cooker or after use, please keep it clean. Protect the induction cooker from bugs, dust and humidity. Avoid letting cockroaches etc fall into the internal parts of induction cooker and causing a short circuit of the electrical board. When not in use for a long period, please clean it and put it into a plastic bag to store it.



 
- ⚠ The cooker cannot be overloaded. Overloading the plate may damage the plastic cover and cooker plate.

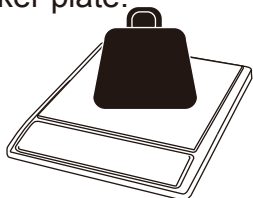

 - ⚠ Metallic objects such as knives, forks, spoons and lids should not be placed on the hotplate since they can get hot.

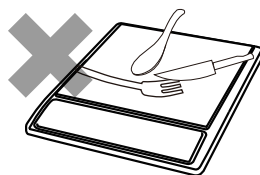

 - ⚠ Do not use the induction cooker near a gas stove, kerosene stove, gas cooker or in any space with an open fire or an environment with high temperature.

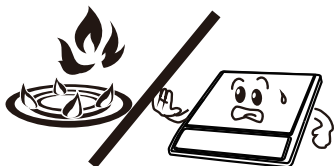

- ⚠ Do not use the induction cooker by putting it onto a carpet, tablecloth or thin paper to avoid blocking the air inlet opening or air outlet opening, which results in influencing heat emission.

 


I.SAFETY INSTRUCTIONS

⚠ Always clean the induction cooker to prevent mess from getting into the fan, which could influence the normal operation of the appliance.



⚠ When operating the appliance or after moving the pot, the cooking area will remain hot for a period of time. Do not touch it, be careful of scalding caused by the high temperature.

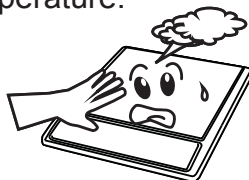

This appliance is intended to be used in household and similar applications such as:- staff kitchen areas in shops, offices and other working environments; -farm houses;-by clients in hotels, motels and other residential type environments ; -bed and breakfast type environments. Indoor use only.

! Mandatory

We suggest that you should periodically check that there are no object (glass, paper, etc) that could obstruct the inlet under your induction cooker.

! Warning

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

! Mandatory

Children should be supervised to ensure that they do not play with the appliance.

! Warning

Never have the induction cooker to work without food inside, otherwise its operational performance may be affected and danger may happen.

! Mandatory

I.SAFETY INSTRUCTIONS

Keep electrical appliance out of reach from children or inform person. Do not let them use the appliances without supervision.

 **Warning**

The instructions shall state that appliances are not intended to be operated by means of an external timer or separate remote-control system.

 **Warning**

Keep the appliance and its cord out of reach of children less than 8 years.

 **Mandatory**

Please turn off and unplug the appliance before cleaning, maintenance or relocation and whenever it is not in use.

 **Mandatory**

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

 **Mandatory**

II.PRODUCT INTRODUCTION

 
The induction cooker is able to meet various kinds of cooking demands by electromagnetic heating, high thermal efficiency, is safe and reliable, easy to clean.

Performance Parameters


Model	Applied voltage/frequency	Rated power	Dimension (mm)	Weight (kg)
MC-RTS2055-E3A	220-240V~ 50/60Hz	2000W	360x290x45	2.65

II.PRODUCT INTRODUCTION

Product Sketch Map

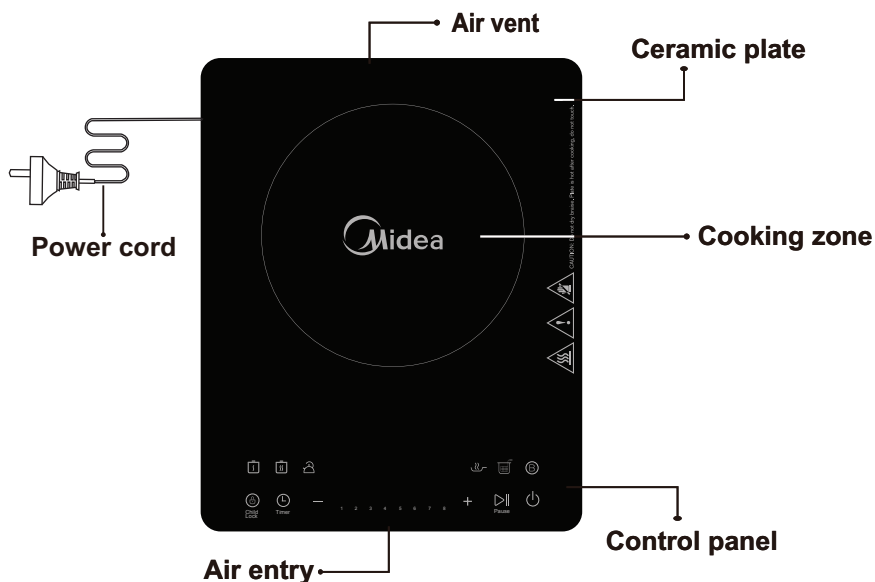

Control Panel

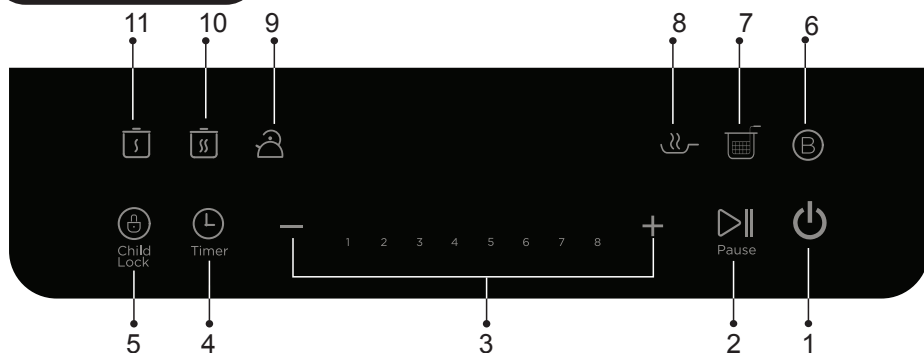 

- | | | |
|------------------------------|----------------------|-----------------------|
| 1. ON/ STANDBY control | 5. Child lock select | 9. Boil control |
| 2. Pause select | 6. Boost select | 10. Simmer control |
| 3. Power regulating controls | 7. Deep fry control | 11. Keep warm control |
| 4. Timer select | 8. Fry control | |

 
II.PRODUCT INTRODUCTION

Before using New Induction cooker

- Read this guide, taking special note of the “Safety Warnings” section.
- Remove any protective film that may still be on your ceramic plate.

Using the Touch Controls

- The controls respond to touch, so you don't need to apply any pressure.
- Use the ball of your finger, not its tip.
- You will hear a beep each time a touch is registered.
- Make sure the controls are always clean, dry, and that there is no object (e.g. a utensil or a cloth) covering them. Even a thin film of water may make the controls difficult to operate.

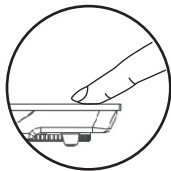

III. OPERATION INSTRUCTIONS

Put the pot on the ceramic plate

- Make sure the air vents are not blocked and keep utensils away from the immediate surrounds of the ceramic plate.
- Make sure the cookware which has food or liquid is placed in the center of ceramic plate.

Plug in

- After the power supply is connected, the buzzer sounds. The display shows “L”, indicating that the induction cooker is in standby mode.

III. OPERATION INSTRUCTIONS

Turn on

- After pressing the “ON/STANDBY” button, the induction cooker is ready for heating. Press the function button to start heating.
- After pressing the “ON/STANDBY” button, if no function button is pressed for one minute, the induction cooker will switch off automatically.
- Under the working mode, if there is no proper pot on the ceramic plate, the induction cooker will not heat up and the alarm will sound to indicate that a pot is required. One minute later, it will switch off automatically.

Function

Power function

In order to select the power intensity you can:

- Either press the “+/-” buttons.
- Or select to the slider, by swiping your finger from left to right on the button.

To guide you, lights appear above each temperature level.

Keep warm mode

When the appliance is in operation, press the “Keep warm” button if you want to keep warm your preparation. The appliance will set automatically on the lowest power and will stop after 120 minutes. To set again the power, Press directly on the “+/-” button.

Simmer mode

To use this mode, press on the “Simmer” button. A lamp lights up. The induction cooker entering the simmer state, the default power level shall be level 2. Under this mode, the power cannot be adjusted. When press “+/-” button or slider again, the induction cooker entering the power mode.

III. OPERATION INSTRUCTIONS

Function

Boil mode

Boil mode is for boiling water. To use this mode, press on the “Boil” button. A lamp lights up. The default power level shall be level 10. After several minutes, it will turn to 8 level power. In this mode, the default working time is 15 minutes.

Note: It is recommended to put water that occupies 30%-80% of the pot capacity when boiling water.

Fry mode

To use this mode, press on the “Fry” button. A lamp lights up. The default power level shall be level 5. After several minutes, it will turn to 3 level power. When press “+/-” buttons or slider again, the induction cooker entering the power state.

Deep fry mode

To use this mode, press on the “Deep fry” button. A lamp lights up. The default power level shall be level 8. After several minutes, it will turn to 7 level power. When press “+/-” buttons or slider again, the induction cooker entering the power state.

Boost mode

The boost button allows obtaining directly the highest power level. By pressing again the boost button the appliance will go back to the power o origin.

How To Lock

Press the “Lock” button to start lock function. The “Lock” indicator lights up. Now only the “ON/STANDBY” button can be used to switch off the appliance, all the other operations are forbidden.

Press the “Lock” button for several seconds to quit the lock function. The “lock” indicator turns off.

III. OPERATION INSTRUCTIONS

Timer

- To use the timer, press the “Timer” button. The digital screen will indicate “0:00”. During the several seconds, press the “+/-” buttons to adjust the cooking time. Each pressure increase or decrease the time of 1 minute. If you maintain the button longer, the time will increase or decrease by increments of 10 minutes. The timer can be set from 1 minute to 180 minutes. Once the time is set, the digital screen will flicker during several seconds before heating. To cancel the timer function, press again on the timer button.

Pause

- Press the “Pause” button to stop heating.
When the induction cooker is in pause, press the “Pause” button again or select a cooking mode to quit the pause status and return to the normal heating process.
After setting Pause , the induction cooker stops heating. After reaching the default pause time, if the pause state is not cancelled, the induction cooker may alarm and automatically switch off.

Switch Off

- When the operating time is over, the induction cooker switches off automatically.
- Press the “ON/STANDBY” button to turn off the appliance .
Note: Do not touch the surface of the ceramic while “H” is displayed, it means the temperature high. While “L” is displayed, it means the temperature low.

IV. COMPATIBLE COOKWARE



Iron oil frying
pan



Stainless steel pot



Iron pan



Iron kettle



Enamel stainless
steel kettle



Enamel cooking
utensil



Iron plate

- Requirement for pot materials: containing magnetic inducing materials.
- Shape requirement: flat bottom, with the diameter more than 14.5 cm and less than 20 cm.
- After the first use, some white spots would appear at the bottom of the pot. This is normal.
- Please pour some vinegar into the pot, heat it at about 60-80°C then wipe the spots away with brush.
- Incompatible pots material: glass, ceramic, aluminium, copper and other non magnetic material.
- If the pot removed, the induction cooker will stop heating immediately. After the buzzer sounds for 10 seconds, it will go into standby mode automatically.

V. CLEANING AND MAINTENANCE

- Before cleaning, please switch off the appliance first and then disconnect the power plug from the power outlet.
Wait till the cooker plate of the induction cooker is not hot and start cleaning.
- After using the induction cooker for a long time, the opening of air inlet/air outlet will pile up with dust or other dirt, please wipe it with a soft dry cloth. Dust in the air inlet and outlet can be cleaned by using a soft brush or a mini vacuum cleaner.

Note: Please do not rinse it with water.

V. CLEANING AND MAINTENANCE

For oil spots on the cooker plate, wipe the cooker plate by using a soft moist cloth with a little tooth paste or mild detergent. And then use a soft moist cloth to wipe it until no stain remains.

When not using it for a long time, please disconnect the power plug from the power outlet and protect the induction cooker from any dust or bugs.

VI. TROUBLESHOOTING

Abnormalities		Key checking points and trouble shooting
After plugging in the power cord and pressing the "ON/STANDBY" key, the indicator and display do not light up.		<ul style="list-style-type: none"> Is the power plug properly connected? Is the switch, power outlet, fuse or power cord damaged?
The "ON/STANDBY" indicator lights up and the display works normally, but heating does not start.		<ul style="list-style-type: none"> Is the pot material proper? Is the appliance in a "Preset" working status? For other causes, please take the appliance to a repairing and maintenance site to be fixed.
Heating suddenly stops during the process.		<ul style="list-style-type: none"> Is the temperature of the oil too high when frying dishes? Is the temperature of the surroundings very high? Is the air inlet or air outlet of the induction cooker blocked? Is the default heating time of the induction cooker over? The self-safety protection of the induction cooker starts, wait for several minutes and connect power to use it.
Code of failure	E3 E6	<ul style="list-style-type: none"> Wait a moment and press the "ON/STANDBY" button when the temperature of the hotplate becomes normal, the induction hotplate will operate as usual.
	E7 E8	<ul style="list-style-type: none"> Turn off the hotplate, when the voltage becomes normal, and then turn on the hotplate, it will operate as usual.
	E1 E2 E4 E5 Eb EA	<ul style="list-style-type: none"> Please contact the special maintenance department.

Emergency

During using, if there are some abnormal cases, please unplug immediately and disconnect power.

For any failure of the product, please contact the special maintenance department or the customer service center.



电磁炉 使用说明书



型号: MC-RTS2055-E3A

感谢您购买美的电磁炉。使用前请仔细阅读本说明书，并妥善存放以备将来使用。

图片仅供参考，请以实物为准。

I. 安全指南

为安全起见，以及为避免损坏本电器或人身伤害，请遵守以下所有安全措施。

忽略安全警告可能会导致人身伤害。

本电器未考虑以下情况：

--- 儿童或残疾人在无人监督的情况下使用；

— 儿童将其视为玩具。

图标： 禁止

强制

 
警告

注意


- ① 切勿在密封容器（如压缩电器、罐头或咖啡壶）中加热食物，以免发生热膨胀引起的爆炸。




- ① 请勿直接用水冲洗电磁炉。请勿将水或汤洒入电磁炉的内部部件。

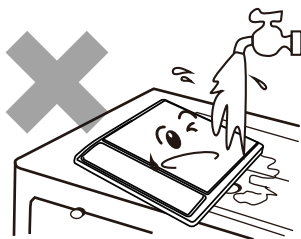

 - ① 以免影响电器性能并避免受伤，请勿加热空锅。使用时，请勿在无人监督的情况下长时间离开电器。如果在无监督的情况下离开电器，请确保锅中有足够的水。

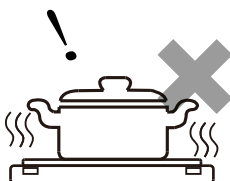


 - ① 为避免发生意外，请勿在使用时将电磁炉放在燃气灶上（磁感线可加热煤气灶的金属部件）。

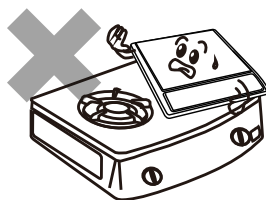


I. 安全指南

 
- ① 请勿在电磁炉加热板上加热铁制品，以避免高温引起的危险。

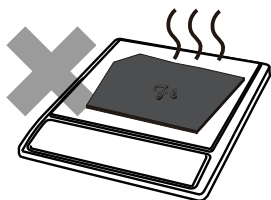


- ① 电磁炉的配套餐具只能用于烹饪。这些厨具不能用于电磁炉和燃气灶。

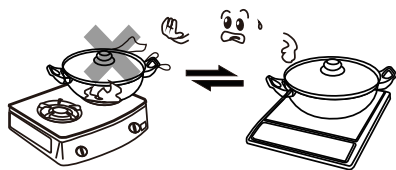 


- ① 为避免烫伤等伤害，请勿让儿童单独操作。

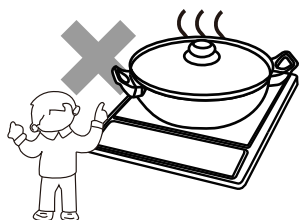 

 
- ① 使用后，请从插座上拔下电源线，以避免长时间电气连接造成电子元件起火和/或损坏。

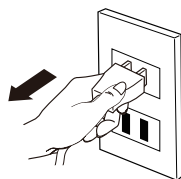

- ① 为免生危险，请勿插入任何异物（如铁丝），也不要堵塞通风孔或进气孔。

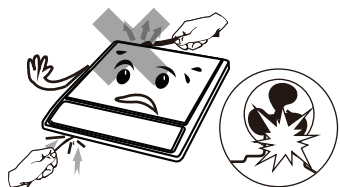 


- ① 带有心脏起搏器的人应该咨询医生。确认不影响起搏器后才能使用本电器。

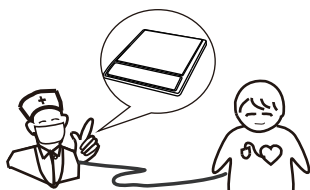 

I. 安全指南

 
- ❗ 为避免损坏，请避免对加热板的冲击。警告：如果表面破裂，请关闭电器电源以免触电。

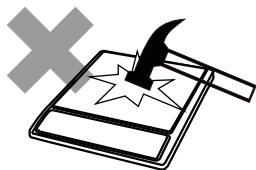


- ❗ 为避免危险，请勿将纸、铝箔、布或其他不合适的物品放置在电磁炉加热板上进行间接加热。



 - ❗ 使用电磁炉时，请勿将其放置在任何金属平台（如铁、不锈钢、铝）上，或将不小于 10 cm 厚的非金属垫放在加热板上。

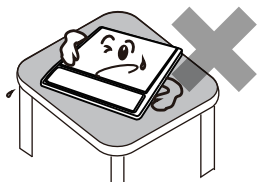

 
- ❗ 使用电磁炉时，请将其水平放置，电磁炉的侧壁、背面与墙壁之间至少留出 10 cm 的空闲空间。请勿在狭窄的空间内使用电磁炉。为避免阻碍热量的释放，请勿遮盖通风孔。

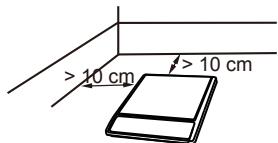

- ⚠ 请使用高功率、等级或高于 10 A 的专用高品质电源插座。请勿使用质量差的电源插座。请勿与配备高功率额定值的电器（如空调、电炉等）共用电源插座，以避免由于插座过载造成的电源损坏。




 - ❗ 如果电源线损坏，必须由生产商、服务代理或类似合格人员更换电源线，以免发生危险。

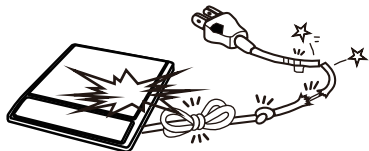

I. 安全指南

 
- ⚠ 请勿使用锋利的工具接触锅板，以免破裂或损坏锅板。如果锅板发生裂纹，请关闭电器以避免可能发生的电击。

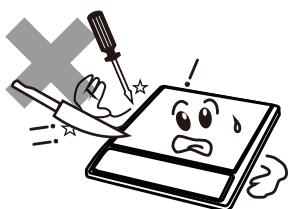


- ⚠ 使用电磁炉时或使用后，请保持电磁炉的清洁。保护电磁炉免受臭虫、灰尘和湿气的影响。避免蟑螂等掉入电磁炉的内部部件，而导致电路板短路。长期不使用时，请将其清洁并放入塑料袋中保存。



 
- ⚠ 炊具不能超载。锅板超载可能会损坏塑料盖和锅板。

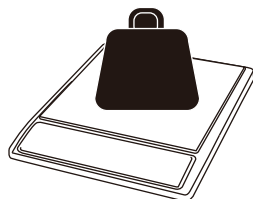

 - ⚠ 因为金属物品会变热，所有，诸如刀、叉、勺子和盖子等金属物品不要放在电热板上。

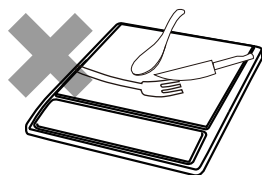

- ⚠ 请勿在燃气灶、煤油炉、燃气炉或任何有明火或高温环境的地方使用电磁炉。

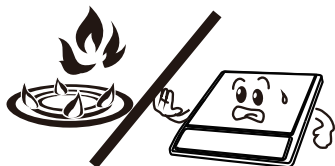 

- ⚠ 请勿将电磁炉放在地毯、桌布或薄纸上，以免堵塞进气孔或出气孔，从而影响散热。



I. 安全指南

⚠ 请务必清洁电磁炉，以防灰尘进入风扇，这可能会影响电器的正常运行。



⚠ 操作电器或移动锅后，烹饪区域的余热将保持一段时间。请勿触摸，小心高温造成的烫伤。



本产品只限于家庭或以下类似场合使用：-商店的员工茶水间、办公室或其他工作场所；-农场；-酒店、汽车旅馆以及其他住宿场所；-住宿和早餐型环境。仅限室内使用。

❗ 强制

8 岁及以上的儿童以及身体，感官或精神能力薄弱或缺乏经验和知识的人员，如果他们接受了安全使用器具的监督或指导并了解使用过程中的危害，可以使用本产品。禁止儿童玩弄本产品。未经监督的儿童不得进行清洁和用户维护。

我们建议您定期检查是否有异物（玻璃、纸等）阻塞电磁炉下的入孔。

⚠ 警告

❗ 强制

应照看好儿童，确保不让他们玩弄设备。

⚠ 警告

请勿空锅使用电磁炉，否则其操作性能可能会受到影响，并可能发生危险。

❗ 强制

I. 安全指南

将该电器放在远离儿童的地方。请勿让他们在没有监督的情况下使用产品。



警告

说明书应声明，不能通过外部定时器或单独的遥控系统操作电器。



警告

8岁以下儿童严禁接触机器和电源线；



强制

清洁、维修、移动或不使用机器时请确保机器处于关闭状态，并拔掉电源线。



强制

身体、感官或智力受损，或缺乏经验的人员（包括儿童）请不要使用本电器，除非在安全责任人的监管下，以及得到安全使用本电器的指导后，方可使用本电器。



强制

II. 产品介绍


电磁炉能够通过电磁加热、高热效率，满足各种烹饪需求，并且安全可靠，易于清洁。

性能参数


型号	外加电压/频率	额定功率	尺寸 (mm)	重量 (kg)
MC-RTS2055-E3A	220-240 V~50/60 Hz	2000 W	360 × 290 × 45	2.65

II. 产品介绍

 电器示意图

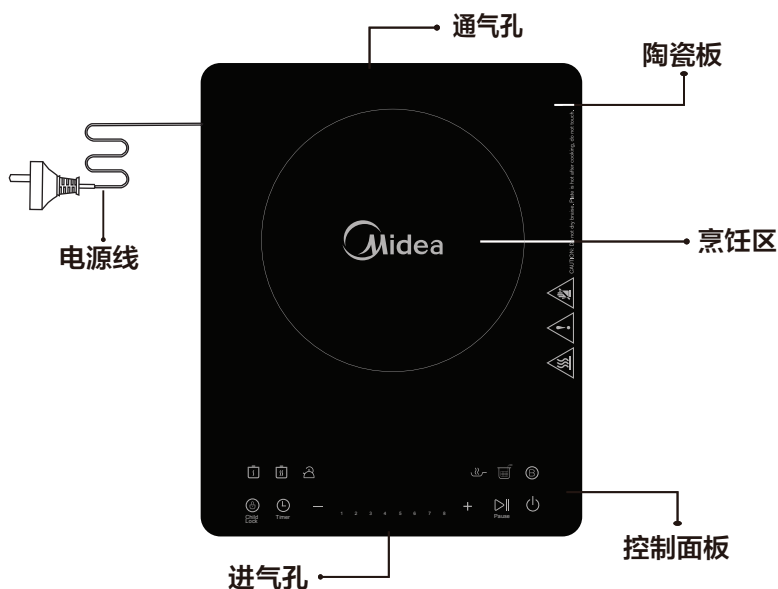

控制面板

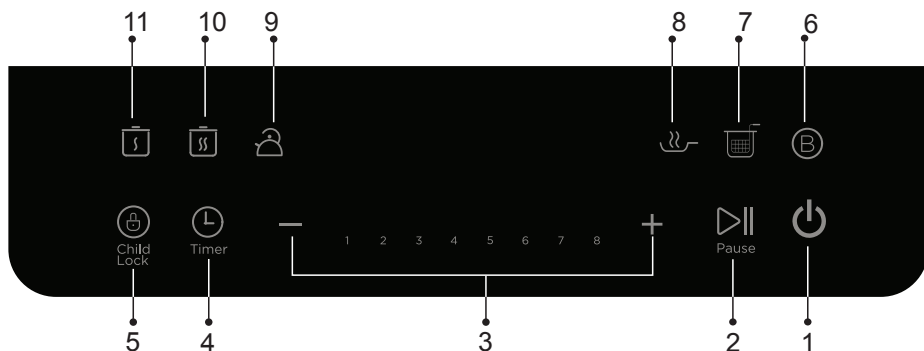 

- | | | |
|--------------|----------|----------|
| 1. “工作/待机”控件 | 5. 儿童锁选择 | 9. 煮沸控件 |
| 2. “暂停”选择 | 6. 升压选择 | 10. 文火控件 |
| 3. 功率调整控件 | 7. 油炸控件 | 11. 保温控件 |
| 4. “预约”选择 | 8. 炒菜控件 | |

 
II. 产品介绍

使用新电磁炉之前

- 阅读本指南，特别注意“安全警告”部分。
- 拆下陶瓷板上的保护膜。

使用触摸控制键

- 控制键对触摸产生响应，因此您不需要用力按。
- 请勿使用指尖。
- 每次触摸产生响应时，你会听到蜂鸣声。
- 确保控制键始终是清洁和干燥的，并且不被任何物体（例如器皿或抹布）遮盖。即使溅上些许水也可能使控制键失去响应。

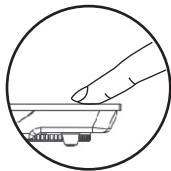

III. 使用说明

将锅放在陶瓷板上

- 确保通气孔不被堵塞，并且餐具远离陶瓷板的四周。
- 确保盛食物或液体的炊具放置在陶瓷板的中央。

插件

- 接通电源后，蜂鸣器响起。显示屏显示“L”，表示电磁炉处于待机模式。

III. 使用说明

开启

- 按下“工作/待机”键后，电磁炉随即进入待加热状态。按下功能键开始加热。
- 按下“工作/待机”键后，如果 1 分钟内未按下功能键，电磁炉将自动关闭。
- 在工作模式下，如果陶瓷板上没有合适的锅，电磁炉将不会升温，并会发出报警，提示需要放锅。1 分钟后，电磁炉会自动关闭。

功能

功率功能

为选择功率强度，您可以：

- 按“+/-”按钮。
- 或者选择滑块，手指按住按钮从左向右滑动。

作为指导，每个温度水平上方都会有灯光出现。

保温模式

当设备运行时，如果你想让此准备工作保温，请按下“保温”按钮。设备将自动设置在最低功率，并将在 120 分钟后停止。要重新设置功率，请直接按下“+/-”按钮。

文火模式

要使用此模式，请按下“文火”按钮。指示灯亮起。电磁炉进入文火状态时，默认功率等级为 2 级。该模式下无法调整功率。当再次按下“+/-”按钮或滑动时，电磁炉进入电源模式。

III. 使用说明

功能

煮沸模式

煮沸模式用于烧水。要使用此模式，请按下“煮沸”按钮。指示灯亮起。默认功率等级为 10 级。几分钟后，功率等级会变为 8 级。在此模式下默认工作时间为 15 分钟。

注意：建议在烧开水过程中，放置占水壶容量 30% 至 80% 的水。

炒菜模式

要使用此模式，请按下“炒菜”按钮。指示灯亮起。默认功率等级为 5 级。几分钟后，功率等级会变为 3 级。当再次按下“+/-”按钮或滑动时，电磁炉进入电源模式。

油炸模式

要使用此模式，请按下“油炸”按钮。指示灯亮起。默认功率等级为 8 级。几分钟后，功率等级会变为 7 级。当再次按下“+/-”按钮或滑动时，电磁炉进入电源模式。

升压模式

升压按钮可直接获得最高功率等级。再次按下升压按钮，设备将回到电源原点。

如何锁定

按下“锁定”按钮启动锁定功能。“锁定”指示灯亮。现在只可使用“工作/待机”按钮来关闭设备，禁止进行任何其他操作。长按“锁定”键几秒钟，即可退出锁定功能。“锁定”指示器熄灭。

III. 使用说明

预约

- 如需使用定时器，请按下“预约”按钮。数码显示屏上会显示“0:00”。在几秒钟内，按下“+/-”按钮来调整烹饪时间。每按一次，时间会增加或减少 1 分钟。如果您长按按钮，每次将增加或减少 10 分钟。定时器可以设置成 1~180 分钟。设定好时间后，数码显示屏会在加热前几秒钟闪烁。如需取消“预约”功能，请再次按下“预约”按钮。

暂停

- 按下“暂停”按钮停止加热。
当电磁炉处于暂停状态时，再次按下“暂停”按钮或选择烹饪模式，电磁炉将退出暂停状态，回到正常加热过程。
设置“暂停”后，电磁炉将停止加热。
达到默认的暂停时间后，如果不取消暂停状态，电磁炉可能会报警并自动关机。

关闭

- 当操作时间结束时，电磁炉自动关闭。
- 按下“工作/待机”键关闭电磁炉。
注意：显示“H”时，表示高温，这时请不要碰触陶瓷制品的表面。
显示“L”时，表示低温。

IV.通用炊具



油煎铁锅



不锈钢锅



铁锅



铁水壶



搪瓷不锈钢水壶



搪瓷炊具



铁板

- 锅质要求：含磁感应材料。
- 形状要求：平底，直径大于 14.5 cm 且小于 20 cm。
- 首次使用后，锅底部会出现一些白斑。这属于正常现象。
- 请将一些醋倒入锅中，在约 60-80°C 时加热，然后用刷子擦去斑点。
- 非通用型锅质：玻璃、陶瓷、铝、铜等非磁性材料。
- 如果取下锅，电磁炉将立即停止加热。蜂鸣器鸣响 10 秒后，将自动进入待机模式。

V. 清洁与维护

- 清洁之前，请先关闭电器的电源，然后从电源插座上拔下电源插头。待电磁炉的锅板散完余热后，开始清洁。
- 长时间使用电磁炉后，进气孔/出气孔将堆满灰尘或其他污垢，请用柔软的干布擦拭。进气孔和出气孔上的灰尘可以使用软刷或微型吸尘器进行清洁。

注意：请勿用水冲洗。

V. 清洁与维护

对于锅板上的油渍，请使用带有少量牙膏或温和洗涤剂的柔软湿布擦拭锅板。然后使用柔软的湿布擦拭，直到没有污渍残留。长时间不使用时，请将电源插头从电源插座上拔下，并保护电磁炉免受任何灰尘或臭虫的损害。

VI.故障排除

异常情况		关键检查点和故障排除
插入电源线后，按“工作/待机”键，指示灯和显示屏不亮。		<ul style="list-style-type: none">• 是否正确连接电源插头？• 开关、电源插座、保险丝或电源线是否损坏？
“工作/待机”指示灯亮起，显示屏正常工作，但未开始加热。		<ul style="list-style-type: none">• 锅质是否适合？• 电器是否处于“预设”工作状态？• 对于其他原因，请将电器带到修理和维护现场进行修理。
加热过程中突然停止。		<ul style="list-style-type: none">• 炒饭时油温是否过高？• 环境温度是否很高？• 电磁炉的进气孔或出气孔是否堵塞？• 电磁炉的加热时间是否为默认？• 电磁炉的自我安全保护开始，等待几分钟，然后连接电源即可使用。
故障代码	E3 E6	<ul style="list-style-type: none">• 当电磁炉的温度恢复正常时，等待片刻，并按“工作/待机”按钮，感应电磁炉照常运行。
	E7 E8	<ul style="list-style-type: none">• 关闭电磁炉，当电压正常后，重新打开电磁炉，它将照常运行。
	E1 E2 E4 E5 Eb EA	<ul style="list-style-type: none">• 请联系特约维修部门。

紧急情况

使用过程中，如果有异常情况，请立即拔下插头并断开电源。如果电器发生故障，请联系专业维修部门或客户服务中心。